
Crommelin®
Waterproofing & Sealing Australia since 1957

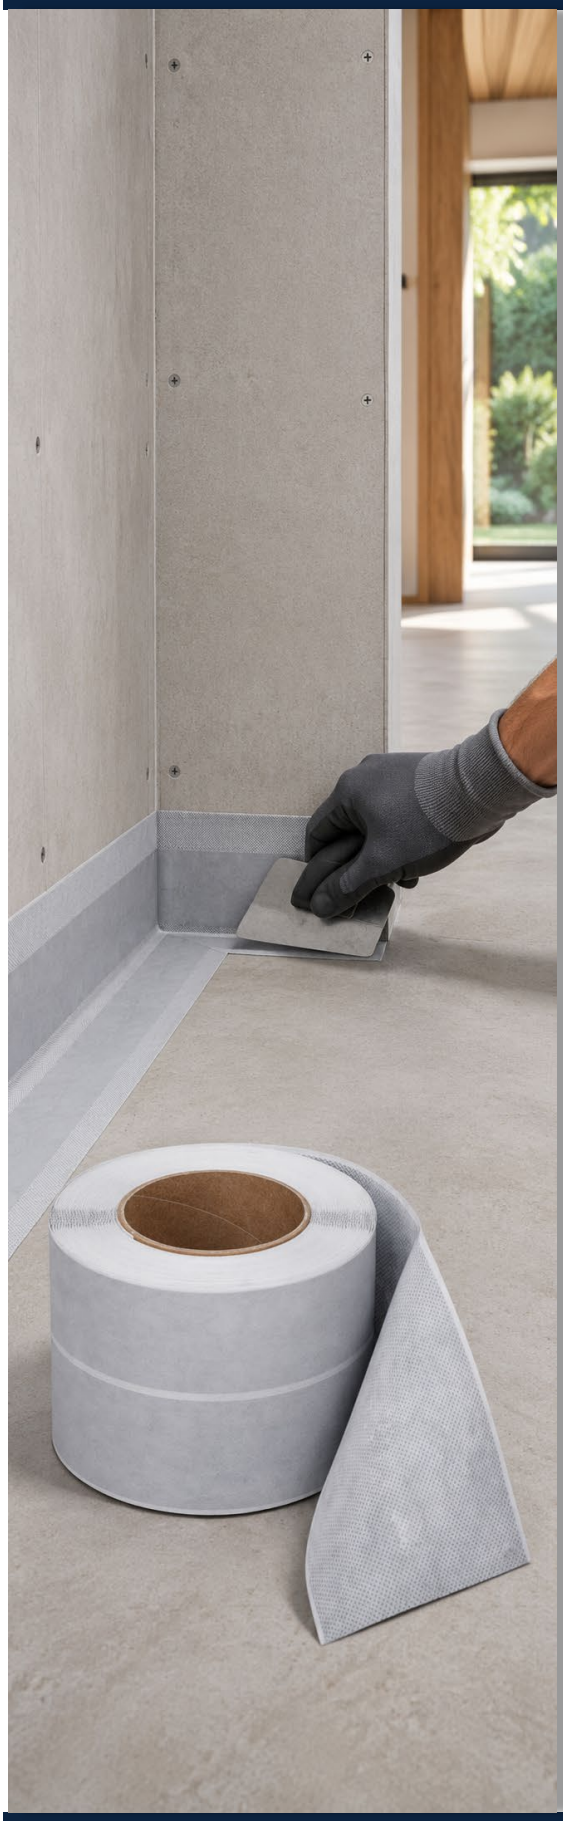

# Waterproofing Tape

## Flexible, Self-Adhesive, Joint Sealing Tape

### DESCRIPTION

**Crommelin Waterproofing Tape is a multipurpose, self-adhesive, interior and exterior, tear resistant, joint sealing tape for use prior to over-coating that delivers an instant seal.**

### FEATURES & BENEFITS

- Excellent adhesion to porous & non-porous surfaces
- Quick and easy application
- Excellent adhesion and instant waterproofing
- Tough, durable and tear resistant
- Over-coat with Crommelin waterproofing membranes, tile adhesives, renders, screeds and textured coatings
- Use on metal, tiles, cement sheet, dense concrete, timber, plasterboard and other non-porous surfaces
- 5m x 80 mm roll

### AREAS OF USE

- Crack repairs on floors before tiling, screeds and toppings
- Sealing floor sheeting joints
- Detailing pipes and penetrations
- Waterproofing junctions before tiling
- Detailing sheeting before rendering or textured coatings
- Patching pinholes and flashing

### SIZES

Waterproofing Tape is available in the following profiles:

- 5 m x 80 mm roll

### PRECAUTIONS

- Where Waterproofing Tape is used, drying times of waterproof membrane may be increased.

**7 Day Technical Support 1800 655 711**
72 Division Street, Welshpool Western Australia 6106 +61 8 9458 5711
service@crommelin.com.au www.crommelin.com.au

## APPLICATION PROCESS

**Full application instructions can be found at [www.crommelin.com.au/full-instructions/](www.crommelin.com.au/full-instructions/)**

- Ensure surface is clean, dry and contaminant free. If surfaces are dusty, prime with Crommelin Surface Primer for Porous Surfaces first. If surfaces are damp, prime with Crommelin Dampstop first. Metal surfaces must be rust free or treated with suitable primer.
- Measure out the length of tape required and cut with scissors or knife.
- Remove the end of the release paper and adhere the tape to the area to be sealed. For best results, slowly roll and stick tape along the length of the joint whilst removing release paper as you go. It is not recommended to remove all release paper before sticking tape to the surface.
- Ensure that no creases or air pockets form by pressing tape into position with a spatula or similar.
- Crommelin waterproofing membranes or other toppings can be applied immediately.

**Note: Do not apply to damp surfaces. Not suitable for use as a trafficable surface or an exposed flashing. Must be over-coated. Do not use over expansion joints. Do not directly over-coat with solvent based coatings.**

**Crommelin® and other marks followed by ® are registered trademarks.**

**Any advice, recommendation, information, assistance or service provided by Crommelin® in relation to its products or their use is given in good faith, however is provided without responsibility or liability.**

**Customers need to undertake their own assessment to determine the suitability of a product for the intended use. As the performance of any product is subject to a wide variety of different surface types as well as environmental and surface-specific conditions, it is essential that a sample of the product be applied to the intended area of use to ensure it is acceptable in appearance and finish and that it performs as required on the specific surface.**

**Crommelin® also reserves the right to update information without prior notice, to reflect ongoing research and product development.**